



Radius **360^{HD}**

Radius **370^{HD}**

Owners Manual





Introduction	1
Important Safety Instructions	2
Re-cycling	3
RoHS Declaration of Conformity	3
Unpacking	4
Amp Panel and Controls for R360 ^{HD}	4
Amp Panel and Controls for R370 ^{HD}	6
Positioning/Initial Set Up	9
Set Up	9
Specifications	10
Trouble Shooting	11
Guarantee and Service	11
Claims under this Guarantee	12
EC Declaration of Conformity	13
Data Protection	14
Owner Information	14

Introduction

Thank you for your purchase of a Monitor Audio Radius^{HD} subwoofer, which has been designed and constructed using quality systems and materials to provide years of enjoyment, reliability and pride of ownership.

Building on the overwhelming success of the original Radius Series, Radius^{HD} brings redesigned cabinet profiles, enhanced cabinet structure, improved aesthetics and improved sonic balance and response.

Please read through this manual to familiarize yourself with any safety advice and how to set up your subwoofer to achieve the very best listening experience.

Please follow this user manual carefully as it contains important information about positioning and set up procedures. For further advanced information on system set-up, FAQ's and multi-lingual support please refer to our web site at: www.monitoraudio.co.uk

Please retain this manual for future reference.

Important Safety Instructions

1. **Read these instructions.**
2. **Keep these instructions.**
3. **Heed all warnings.**
4. **Follow all instructions.**
5. **Do not use this apparatus with water.**
6. **Clean only with a dry cloth.** Great care and attention has gone into the materials chosen to produce the product. A gentle wipe with a dry, clean cloth is all that is required to remove any dust. Treat it as you would a fine piece of furniture because that is how they have been designed.
7. **Do not block any ventilation openings.** Install in accordance with Monitor Audio's instructions.
8. **Do not install near any heat source**, such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. **Do not defeat the purpose of the polarised or grounding type plug.** A polarised plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wider blade or the third prong are provided for your safety. If the provided plug does not fit your outlet, consult an electrician for replacement of the obsolete outlet.
10. **Protect the power cord from being walked on or pinched** particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. **Only use attachments/ accessories specified by Monitor Audio.**
12. **Use only with the cart**, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/ apparatus combination to avoid injury from tip-over.



13. **Unplug this apparatus during lightening storms**, or when unused for long periods of time.
14. **Refer all servicing to qualified service personnel.** Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen onto the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally or has been dropped.
15. **This apparatus shall not be exposed to dripping or splashing water** and that no object filled with liquids such as vases shall be placed on the apparatus.
16. **The appliance coupler is used as the disconnect device**, the disconnect device shall remain readily operable.
17. **This exclamation point within an equilateral triangle** is intended to alert the user to the presence of important maintenance (servicing) instructions in the literature accompanying the appliance.



WARNING

- **TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE**
- **TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE**
- **TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE PLUG TO WIDE SLOT AND FULLY INSERT.**



This lightning flash with an arrow head symbol, within an equilateral triangle, is intended to alert the user to the presence of un-insulated “dangerous voltage” within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to the persons.



Warning: To reduce the risk of electric shock, do not remove cover (or back), no user-serviceable parts inside. Refer servicing to qualified service personnel.



This exclamation point within an equilateral triangle is intended to alert the user to presence of important maintenance (servicing) instructions in the literature accompanying the appliance.



This is a “Class II”, “double insulated apparatus”. This apparatus must NOT have a safety connection to Earth.

Re-cycling

Correct Disposal of Waste Electrical and Electronic Equipment (WEEE) by User in Private Households in the EU.

This symbol on the product or accessories indicates that they must not be disposed of with your household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. Instead it is your responsibility to dispose of your waste equipment by handing it over to a designated WEEE collection point for recycling. The separate collection and recycling of your waste equipment will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

For more specific information about where you can take your equipment for recycling please contact your local city/council office, your local waste disposal service or the outlet where you purchased your Radius^{HD} product.

RoHS Declaration of Conformity

Directive 2002/95/EC of the European Parliament and of the Council on the reduction of the use of certain hazardous substances in electrical and electronic equipment, January 2003.

Background

The RoHS directive restricts the use of Lead (Pb), Cadmium (Cd), Mercury (Hg), hexavalent Chromium (CrVI), polybrominated biphenyl (PBB) compounds, and polybrominated diphenyl ether (PBDE) compounds in electrical and electronic equipment sold in the European Union.



Unpacking




A feature of both the Radius^{HD} subwoofers is the exposed drive unit. Great care must be exercised at all times to ensure it is not damaged during unpacking and when finally sited in the room. Any physical damaged caused to the drive unit by not complying with this requirement will not be covered by warranty.

The feet are attached to your product ready to use. The mains power cord is contained separately in the packaging and should be removed prior to unpacking the product.

To remove the product from its carton place some protective material on the floor and having removed any other loose items (mains lead) from the top of the packaging, carefully invert the carton. Also see the icons on the carton. Gradually pull the carton upwards to expose the subwoofer, which will be presented with its base uppermost. Remove fixing tape from plastic bag and expose the base/cabinet. The feet are factory fitted to your product to allow for swift installation and enjoyment of you new purchase.



Amp Panel & Controls for R360^{HD}

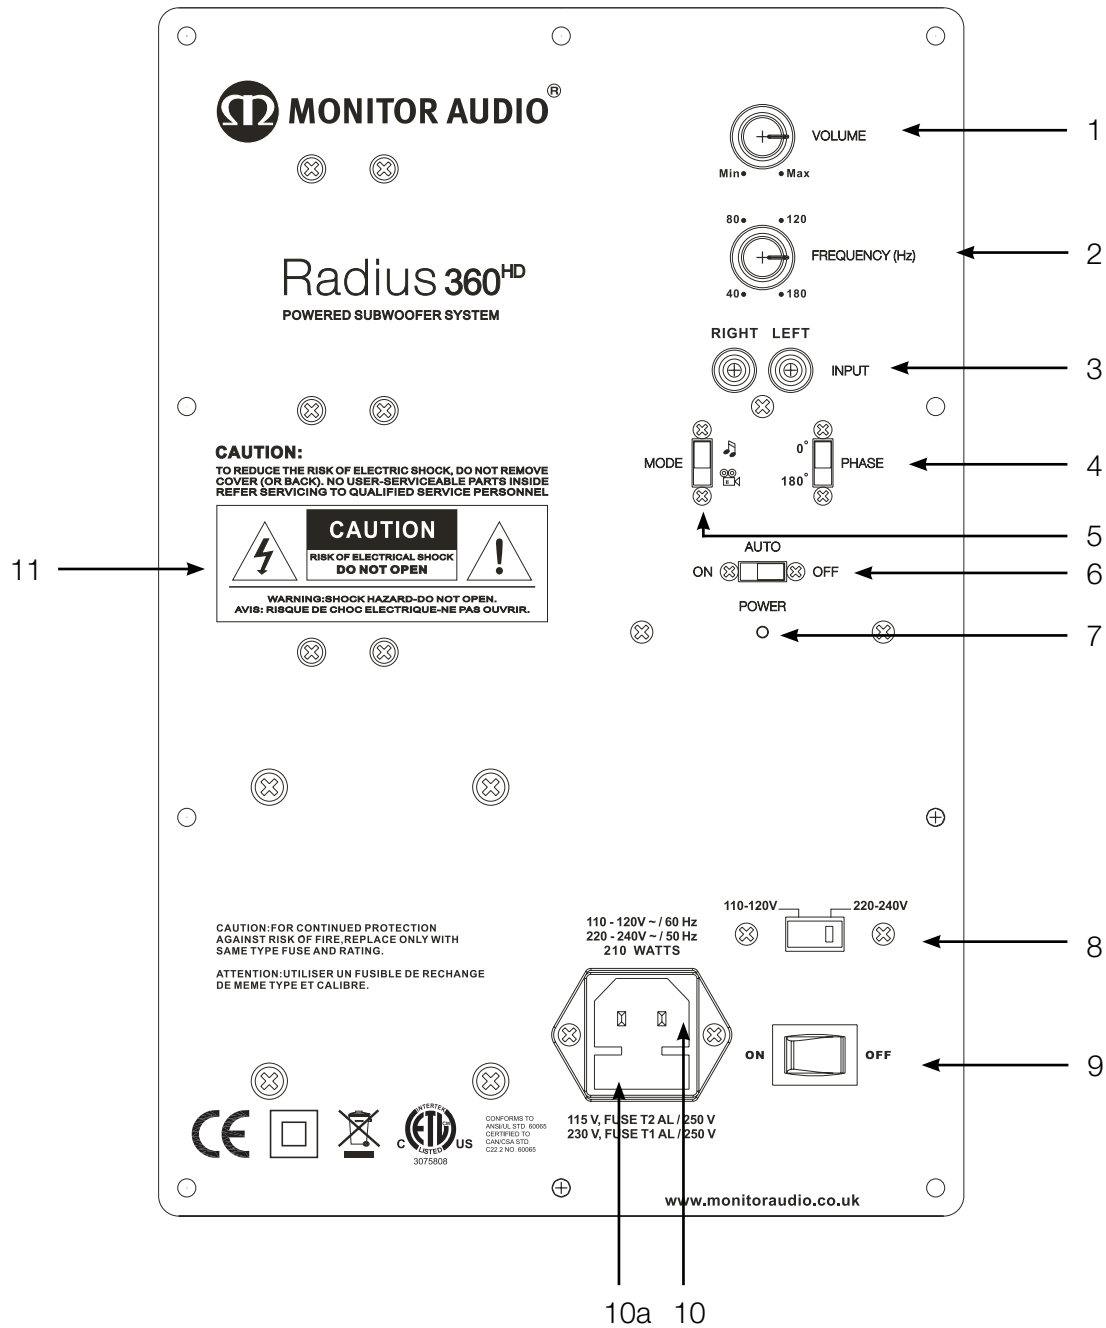

1. Volume
This control allows the subwoofer level or loudness to be adjusted in order that you can achieve a totally controlled, balanced sound.
2. Frequency
This feature controls the upper frequency limit of the Radius 360^{HD}. The table below will help you to select the correct frequency at which to crossover depending on your main speakers.

Type of Main Speaker	Monitor Audio Product	Crossover Control Setting
Large floor-standing speaker	PL300; GS20/60; RS6/8; BR6	40-60 Hz
Small floor-standing speaker	RS5; BR5; R270 ^{HD}	50-70Hz
Large stand-mount/ bookshelf speaker	PL100; GS10	50-80 Hz
Small stand-mount/ bookshelf speaker	RS1; BR1/2; R225 ^{HD} /R250 ^{HD} / R one ^{HD}	60-90 Hz
Small satellite speaker	R45 ^{HD} /R90 ^{HD} /R180 ^{HD}	80-120 Hz

3. RCA Phono Input Connection
This is the only method of signal input connection to the R360^{HD}. When using a stereo amplifier system, connection can be provided by a pair of high-quality signal cables from the pre-out section of an amplifier. If a digital AV processor or AV receiver/amplifier is to be used, a single cable can be connected from the 'sub out' or LFE connection on the amplifier to the RCA input connection on the R360^{HD} labelled 'R'. The RCA input marked 'L' in this case will remain unused. Note: - cable lengths should not exceed 10 metres to avoid interference from other electrical appliances.
4. Phase
The phase control is used to synchronise the output between the Radius 360^{HD} /R370^{HD} and main/satellite speakers. For most applications this should be set to 0 degrees.
5. Mode Switch
This facility is used to set the desired frequency contour for music or home cinema system. Music mode, has a much smoother, flatter response. Where as in movie mode, there is a 3dB boost between 30-50Hz, before it smooths out.
6. Power Mode switch
The Power Mode Switch has three positions: 'On'-'Auto'-'Off'. With the switch in the 'On' position, the subwoofer is permanently switched on under all conditions. In the 'Auto' position the subwoofer will automatically switch on when an input signal is received and will remain on until no signal is received for around 10-15 minutes, the R360^{HD} will then switch into standby mode until a signal is received once more. When the switch is in the 'Off' position the subwoofer will not function.
7. Power LED
8. Mains Voltage Selector
This is factory set to your country's mains voltage specification. Do not attempt to adjust this as this may lead to permanent damage to the product and even the risk of fire. There is a clear plastic cover over the selector to prevent accidental adjustment.
9. Power Switch with Auto off Facility
The power switch has two positions: Off - Auto On. In the Auto On position the sub-woofer unit will remain in standby mode until the unit receives an input signal (greater than 4mV). If the subwoofer unit does not receive a signal within 10-15 minutes, it will switch to standby mode until it receives a further signal.
10. IEC Mains Power Connector/ Fuse Location
The R360^{HD} is supplied with a two-pin mains input socket for connection to the mains supply. Use ONLY the appropriate IEC mains lead provided with the product. Also fitted is an external mains fuse. If this fuse blows during operation a spare fuse is provided within the fuse holder for replacement. If you wish to change the fuse, you can do this by removing the IEC mains lead and carefully levering out the original fuse from its holder below the IEC mains input socket (10a). If the fuse blows again it is advisable to seek help from an authorised service agent. DO NOT attempt to re-fit a further fuse as this could result in serious damage to the amplifier unit.
11. Warning Information
See warning information on page 3

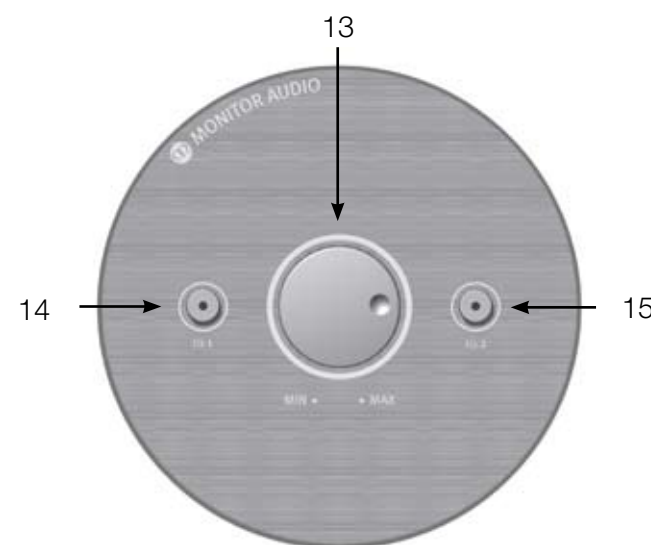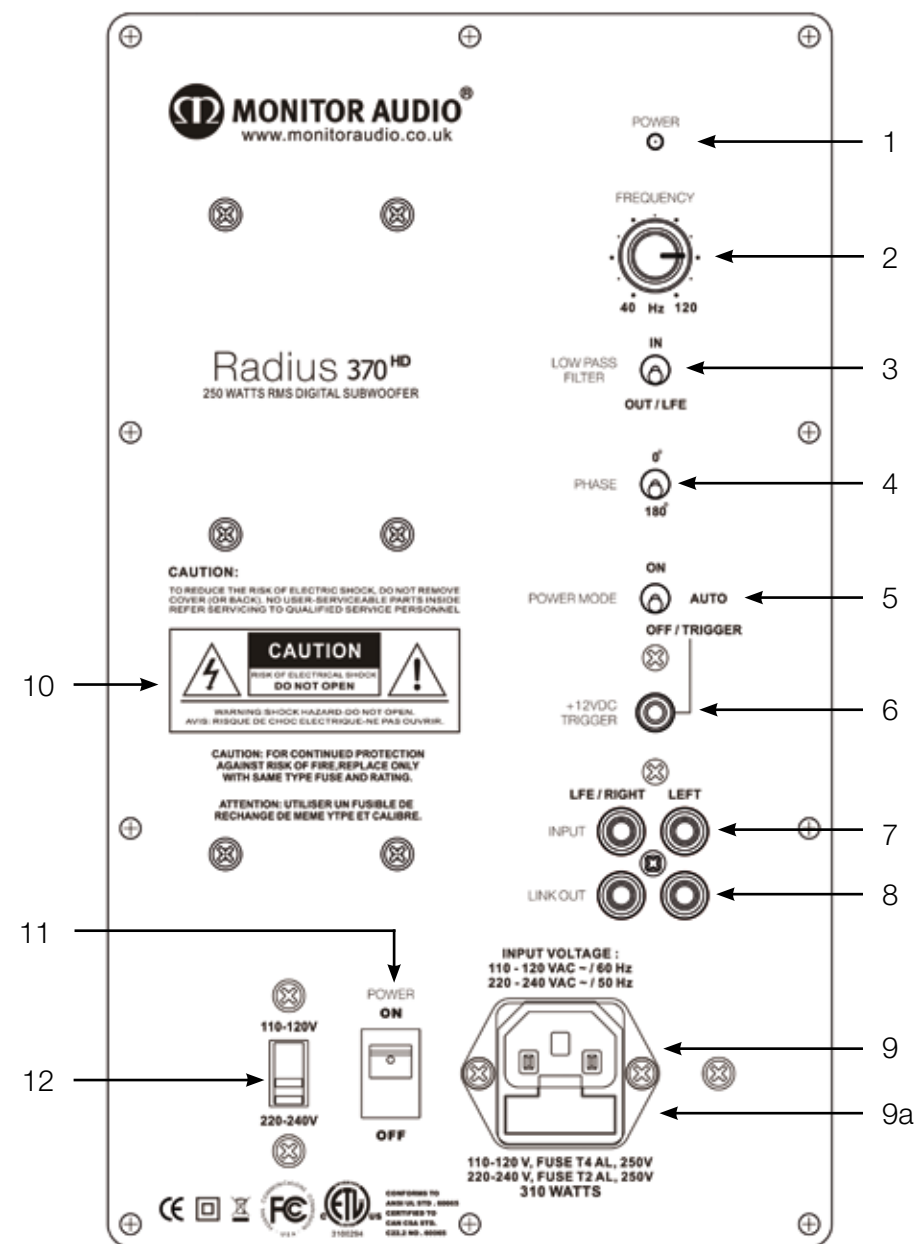

Amp Panel & Controls for R370^{HD}

- Stand-by / On Indicator**
The LED indicates whether the unit is in stand-by mode or operational. It will be illuminated red when in stand-by, and green when operational.
 - Crossover Frequency Control**
The crossover frequency control only operates when the low pass filter switch (refer to section 3.) is in the 'In' position. This control feature is used to set the upper frequency limit (low pass) of the R370^{HD}. The crossover control should be set in accordance with the size or bass output of the main/satellite speakers. Refer to the chart below as a guide to setting the crossover frequency control to the optimum position. Much will depend on the correct low frequency response of the main speakers and their position in your room. Experimentation is advisable.
- | Type of Main Speaker | Monitor Audio Product | Crossover Control Setting |
|--------------------------------------|---|---------------------------|
| Large floor-standing speaker | PL300; GS20/60; RS6/8; BR6 | 40-60 Hz |
| Small floor-standing speaker | RS5; BR5; R270 ^{HD} | 50-70Hz |
| Large stand-mount/ bookshelf speaker | PL100; GS10 | 50-80 Hz |
| Small stand-mount/ bookshelf speaker | RS1; BR1/2; R225 ^{HD} /R250 ^{HD} /R one ^{HD} | 60-90 Hz |
| Small satellite speaker | R45 ^{HD} /R90 ^{HD} /R180 ^{HD} | 80-120 Hz |
- Low Pass Filter Switch**
When set to the 'In' position the crossover frequency control (section 2) is activated and can be adjusted from 40Hz to 120Hz using the crossover frequency control. When set to the 'In' position it can be used with an amplifier that does not have a dedicated subwoofer or LFE output, such as a stereo 2-channel amplifier. If the amplifier or AV processor has a dedicated LFE or subwoofer output, the Low pass filter switch should be set to the 'Out' position. The low pass filter will then be set by the AV amplifier's internal filter. This should be set in accordance with the amplifier or AV processor user guide.
 - Phase Control Switch**
The Phase Control is used to synchronise any delay between the R370^{HD} and main/satellite speakers. When the R370^{HD} is in phase with the main/satellite speakers the sound should be full bodied. Sit in a normal listening position whilst adjusting the phase switch. Help from another person may be required in order to do this easily. When set correctly the location of the subwoofer should be almost undetectable. Experimentation is advisable in order to achieve optimum results. However it should be noted that in most cases the phase control switch should be set to 0 degrees, especially when using a digital AV processor or AV receiver amplifier.
 - Power Mode Switch with On-Auto-Off Facility**
The Power Mode Switch has three positions: 'On'-'Auto'-'Off'. With the switch in the 'On' position, the subwoofer is permanently switched on under all conditions. In the 'Auto' position the subwoofer will automatically switch on when an input signal is received and will remain on until no signal is received for around 10-15 minutes, the R370^{HD} will then switch into standby mode until a signal is received once more. When the switch is in the 'Off' position the subwoofer will not function.
 - 12 Volt Trigger Input ~ Centre Pin = +12Vdc**
For external power control from AV amplifier/ receiver to the R370^{HD}. Monitor Audio recommend using this function and a lead is supplied. This 12 volt signal is supplied by the AV amp/receiver and tells the R370^{HD} to turn on from standby mode. This allows a more accurately controlled auto on/off function, and is far more energy efficient. When using this method of connection, it does not matter what position the Power Mode Switch (5) is in, for it to function correctly.
 - RCA Line Level Inputs (Left & Right)**
This is the only method of signal input connection to the R370^{HD}. When using a stereo amplifier system, connection can be provided by a pair of high-quality signal cables from the pre-out section of an amplifier. If a digital AV processor or AV receiver/amplifier is to be used, a single cable can be connected from the 'sub out' or LFE connection on the amplifier to the RCA input connection on the R370^{HD} labelled 'R'. The RCA input marked 'L' in this case will remain unused. Note: - cable lengths should not exceed 10 metres to avoid interference from other electrical appliances.

8. RCA Line Level Outputs (Left & Right)

RCA line level outputs are provided in order to use other sub woofers in conjunction with the R370^{HD} by ‘daisy chain’ type connection. The outputs are link out only connections and do not provide any form of filtering.

9. IEC Mains Power Connector/ Fuse Location

The R370^{HD} is supplied with a two-pin mains input socket for connection to the mains supply. Use ONLY the appropriate IEC mains lead provided with the product. Also fitted is an external mains fuse. If a fuse blows during operation a spare fuse is provided within the fuse holder for replacement. If you wish to change the fuse, you can do this by removing the IEC mains lead and carefully levering out the original fuse from its holder below the IEC mains input socket (9a). If the fuse blows again it is advisable to seek help from an authorised service agent. DO NOT attempt to re-fit a further fuse as this could result in serious damage to the amplifier unit.

10.Warning Information

See warning information on page 3

11.Mains Power Switch

The Mains Power Switch should be switched to the ‘Off’ position when the R370^{HD} will not be used for extended periods. The switch must be in the ‘On’ position for the subwoofer to function.

WARNING: Due to the mains switch being located on the rear panel, the apparatus must be located in the open area with no obstructions to access the mains switch.

12.Mains Voltage Selector

This is factory set to your countries mains voltage specification. Do not attempt to adjust this as this may lead to permanent damage to the product and even the risk of fire. There is a clear plastic cover over the selector to prevent accidental adjustment.

13.Volume Control

This control allows the level or volume to be adjusted in order to achieve a balanced overall sound. To use this facility you will need to play a selection of familiar music or film excerpts. Start with the volume at minimum and increase the level control until a balanced sound is established. If using an AV processor or AV receiver amplifier, the system can adjusted by the test tone function within the set-up features. (Refer to the set up section in the AV processor or AV receiver amplifier user guide.) When the R370^{HD} is correctly set-up, you should not be able to identify its location easily in the room.

14.EQ 1 setting

The EQ 1 setting should be set as a default option. This will provide the best overall transient response and power output. This setting will provide a maximally flat response suitable for music or music video. Note: Frequency roll off starts at 27Hz.

15.EQ 2 setting

The EQ 2 setting should be used when an emphasis in the low frequency is required. An additional boost of 4dB will be provided at 21Hz to give impact essential for action movies.

You can toggle between the EQ1 and EQ2 to test which one is best suited to your environment. This is done by pressing the buttons located on the control panel.

The blue LED’s of the EQ buttons will remain on permanently. This indicates that the unit is in stand by mode when not in use.

Positioning/Initial Set Up

Leave the subwoofer unplugged from the mains until the installation procedure is completed. The subwoofer should now be sited in the most suitable position, preferably not directly in the corner of the room as this may cause excessive bass ‘boom’. Once a desirable position is achieved it is important to check if the cables are long enough to reach comfortably without being under tension. The optimal control settings will depend entirely on your system configuration. For initial trials set the controls as follows:

Volume Control	Should be set to minimum
Frequency Control	Should be set to the minimum position (40Hz)
Phase Control	Should be set to zero degrees
Power Mode Switch (R370 ^{HD} Only)	Should be set to ‘Auto’ (if not using 12v trigger)
EQ Setting (R370 ^{HD} Only)	This will be set as EQ1 by default when powered up
Mode setting (R360 ^{HD} Only)	This should be set to Music: 🎵
Low Pass Filter Switch (R370 ^{HD} Only)	Should be set to the ‘Out’ position

Input connections can be made at this stage before the power is connected to the subwoofer. Do not connect the 12v trigger yet.



Never connect or disconnect any leads with the subwoofer switched on.

Set Up

Once the input cables are connected and the controls are set in accordance with the initial set-up procedure above, the subwoofer can be connected to the mains power supply and switched on at the mains power switch. Do not play any music at this stage. Power Mode Switch in the ‘Auto’ position, the unit should remain in standby with the power LED on the amp panel should be red, and the EQ1 button illuminated blue (R370^{HD} only) until the AV amp is turned on or a signal is received.

To manually set up you sub, play a variety of music/ film excerpts that you are familiar with starting at a very low volume level, increasing to an average listening level once you are sure everything is working correctly. Please now follow the instructions below: -

- For use with an AV amp/receiver (product with Subwoofer output) please select the low pass filter switch to the ‘Out’ position. Otherwise select low pass filter switch to the ‘On’ position. This engages the crossover frequency control on the subwoofer (please refer to pages 5 & 7).
- If using the crossover frequency control please adjust in accordance with the table on page 6. Further fine-tuning may be required.
- The Phase Control can now be set, please refer to pages 5 & 7 for further information.

It is important to try a variety of music and film excerpts with which you are familiar in order to obtain the optimum overall settings.

A lot of AV amplifiers/ receivers have an auto set up on them. If you use this to set up your sub, please remember to go back into the settings of your AV amp and check them. You may need to go back and set it up manually, both on the sub and on the AV amp.

12v Trigger (R370^{HD} only)

When you are happy with the set up of your R370^{HD}, turn off both the source and your sub woofer. Connect the supplied lead to your amp and your sub. The Power Mode Switch on the R370^{HD} can be left in any position. The Mains Power Switch should be left in the ‘on’ position. With the trigger connected, the sub will turn on when the source is turned on and will stay until the source is turned off. This is the most energy efficient way of using your sub woofer.



Specification

R370^{HD}

Low frequency limit:-	27Hz (EQ1) 21Hz (EQ2)
Upper frequency limit:-	40 – 120 Hz Variable
Low pass filter alignment:-	Active 4th order 24db/octave (two-stage filter)
Cabinet Specification:-	Sealed Cabinet of 25mm M.D.F construction with internal bracing
Amplifier Output:-	250 Watts (RMS)
Amplifier classification:-	Class- D Digital amplifier
Driver compliment:-	1 x 10” C-CAM® subwoofer driver
Dimensions:- (H x W x D)	Millimetres:- 367 x 320 x 320 Inches:- 14 ⁷ / ₁₆ x 12 ⁵ / ₈ x 12 ⁵ / ₈
Input Impedance: -	20K Ohms
Mains input voltage:- (Factory Preset)	110 - 120 Vac / 220 - 240 Vac 50/60Hz

R360^{HD}

Low frequency limit:-	27Hz
Upper frequency limit:-	40 – 180 Hz Variable
Cabinet Specification: -	Sealed Cabinet of 18mm M.D.F construction
Amplifier Output:-	100 Watts (RMS)
Driver compliment:-	1 x 8” Ultra long through subwoofer driver
Dimensions:- (H x W x D)	Millimetres:- 375 x 225 x 321 Inches:- 14 ³ / ₄ x 8 ⁷ / ₈ x 12 ⁵ / ₈
Input Impedance: -	20K Ohms
Mains input voltage:- (Factory Preset)	110 - 120 Vac / 220 - 240 Vac 50/60Hz

C-CAM® is a registered trade mark of Monitor Audio Ltd

Trouble Shooting

Should you experience any technical, or set-up problems with your subwoofer please check the Trouble Shooting Guide below:

My subwoofer will not turn on/no power.

- Is the LED illuminated on the back of the unit? If not, then check your mains lead is properly connected both at the subwoofer and at the mains outlet. Also check the fuse of the mains plug (where fitted) and also the fuse in the subwoofer. See page 5 & 8 for further information on changing the fuse and it’s location.
- Is the LED on the back red? If so, you have power going to the unit. It could be that there is no signal, or the 12v trigger is connected and the source not turned on (see below).
- Have you got the 12v trigger connected? If so, the subwoofer will not power up until the source is powered up.
- Has it got a signal going to it (12v trigger not being used)? If so, is the Power Mode Switch in the Auto or On position, and the signal source is turned on? Try adjusting the volume level of the source.

If it still does not turn on/ power up, please contact your local dealer/ distributor or Monitor Audio immediately.

No sound from subwoofer.

- Is the LED on the back red or green? If it is red, then the unit hasn’t actually turned on. See above comments. If it is green, then your unit is powered up and turned on. Check further suggestions below.
- Are the signal leads connected correctly? Check these. If possible, check with a second, known to be working set.
- Is the volume level just very low?

If it still does not output a signal, please contact your local dealer/ distributor or Monitor Audio immediately.

Guarantee and Service

To validate your warranty please visit www.monitoraudio.co.uk within 30 days of purchase.

When you register here you’ll gain free entry to our monthly prize draw! What’s more you’ll be the first to hear about the great things happening at Monitor Audio, including new products and events!

This equipment has been fully tested prior to dispatch from the factory. Both the craftsmanship and the performance of this product is guaranteed against manufacturing defects for the period of **one** year from the date of purchase (see conditions below), provided that the product was supplied by an authorised Monitor Audio retailer under the consumer sale agreement. (The words ‘consumer sale’ shall be construed in accordance with section 15 of the supply of goods act 1973). Monitor Audio accepts no responsibility for defects arising from accident, misuse, abuse, wear and tear, modification or operation outside of that specified within this instruction manual. Neither will responsibility be accepted for damage or loss occurring during transit to or from the parties claiming under this guarantee.

This guarantee covers both labour and parts. The liability of Monitor Audio is limited to the cost of repair or replacement of the defective parts (at the discretion of Monitor Audio) and under no circumstances extends to consequential losses or damage.

Claims under this Guarantee

The equipment should be returned in its original packaging to the original supplier where possible, or to any other authorised Monitor Audio dealer. If it is not possible to return the equipment by hand, then it should be sent carriage prepaid via a reputable carrier. If the original packing is not available replacement packaging can be purchased from Monitor Audio. If you have any difficulties complying with these requirements please contact us at the following address:

Customer Service	Tel:	44 (0) 1268 740580
Monitor Audio Ltd.	Fax:	44 (0) 1268 740589
Unit 2, 24 Brook Road	Internet:	www.monitoraudio.co.uk
Rayleigh	Email:	info@monitoraudio.co.uk
Essex		
SS6 7XL		
England		

This guarantee does not affect the statutory rights of the consumer under UK law.

EC Declaration of Conformity

EC Declaration of Conformity



We, Monitor Audio Ltd.
Unit 2,24 Brook Road
Rayleigh
Essex
SS6 7XL
England

Declare in own responsibility, that the R370HD product described in this manual is in compliance with Technical Standards/Council Directives:

(LVD) 73/23/EEC Low Voltage Directive

EN60065: 09.93+ A11:09.97 Safety requirements for mains operated electronic and related apparatus for household and similar use.

(EMC) 89/336/EEC Electro Magnetic Compatibility

EN55013: 08.90+A12:08.94+A13:12.96 Limits and methods of measurement of radio disturbance characteristics of broadcast receivers and associated equipment.

EN55020: 12.94+A11:12.96 Electro magnetic immunity of broadcast receivers and associated equipment.

EN61000-3-2: 04.95+A1:1998+A2:1998 Electro magnetic compatibility (EMC) – Part 3: Limits – Section 2: Limits for harmonic current emissions (equipment input current up to and including 16 Ampere per phase).

EN6100-3-3: 01.95 Electro magnetic compatibility (EMC) – Part 3: Limits – Section 3 : Limits of voltage fluctuations and flicker in low-voltage supply systems for equipment with rated current up and including 16 Ampere per phase.

Signed by:

Name: D.S. Hartley

Position: Technical Director

Company: Monitor Audio Ltd



Data Protection

We at Monitor Audio are committed to respecting the wishes and privacy of our customers. Any information you provide will be held in the strictest confidence and only used within the Monitor Audio organisation for the provision of services such as warranty claims or spare parts.

We may wish to contact you in the future to ensure you are happy with the products and standards of service we provide and to keep you up-to-date with the latest products and promotions we have to offer.

Should you wish not to be contacted by us either by post, e-mail or phone, please tick the box on the warranty card. Alternatively you can request not to be contacted in future by writing to Customer Service, at the address on the previous page.

Owner Information

Product Details

Model R360^{HD} ☐ R370^{HD} ☐

Product Serial No

Amp panel Serial No

Date of Purchase

Dealer Details

Dealer Name

Address

Town, Post code, Country

e-mail address

Monitor Audio reserves the right to alter specifications without notice.



Monitor Audio Ltd.
Unit 2, 24 Brook Road
Rayleigh, Essex
SS6 7XL
England
Tel: 01268 740580
Fax: 01268 740589
Email: info@monitoraudio.co.uk

monitoraudio.co.uk
Designed in the United Kingdom

Version 2. 2008

